

CBT

BACK-LIT TROFFER

NOTE: Components shown in images are representative only and may vary based on the configuration ordered.

CAUTION

Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

WARNING

If any special control devices are used with this luminaire, follow the instructions carefully to assure full compliance with NEC requirements. If there are any questions, contact a qualified electrical contractor.

WARNING

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

WARNING


This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

INSTALLATION METHOD 1: RECESSED MOUNTING

STEP 1

Different lumen and correlated color temperature levels can be achieved by setting the switch on the driver cover to different positions.


For 38W product: 2750lm-3300lm-4400lm
For 48W product: 3300lm-4400lm-5500lm

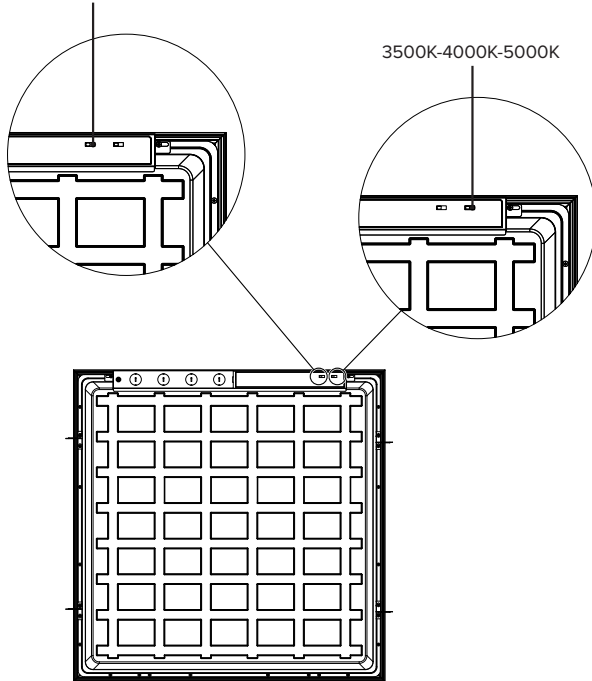

NOTE: LS35 and LS40 luminaires only have one (1) switch.


STEP 2

Raise unit into ceiling. Cross tees may need to be trimmed when fixtures are installed in certain applications. For instance when installing a 2x4 recessed troffer into a 2x2 ceiling grid the cross tees would need to be trimmed or a zero clearance cross tee utilized.

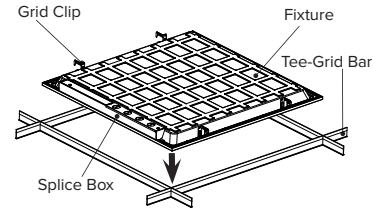

STEP 3

Open access plate. Use knockouts to connect power using appropriately sized electrical fittings. Make wiring connections.

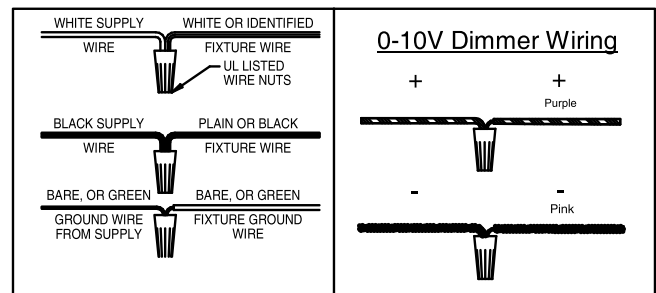

STEP 4

Bend T-bar clips into position. Support the fixture to the building structure by support wires (supplied by others) through the grid clip hole.

