

Installation Instructions For Small Grounding Kit 87927766




A Pentair Company

HOFFMAN

2100 Hoffman Way
Anoka, MN 55303-1745 USA
(763) 421-2240 Fax: (763) 422-2178
Customer Service: (763) 422-2211
www.hoffmanonline.com

PANEL SCREWS ENCLOSED

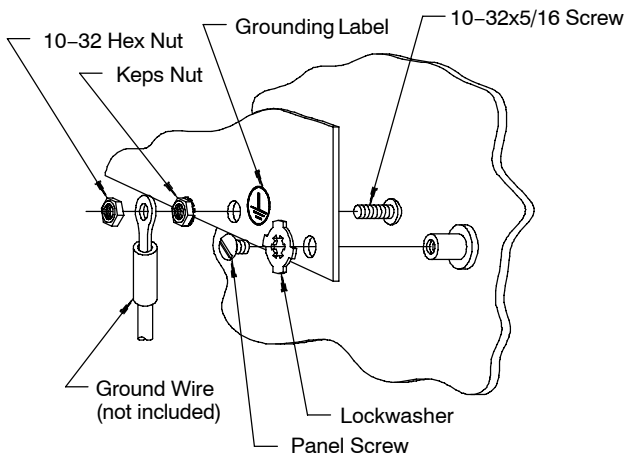

1. Insert the 10-32x5/16 screw through the hole in the panel as shown.
2. Secure screw with keps nut. The keps nuts must penetrate into the paint to insure electrical continuity.
3. Attach the ground wire and secure with 10-32 hex nut as shown.
4. Install the lockwasher under one of the screws securing the panel to insure grounding between the panel and the enclosure.
5. Attach included grounding label adjacent to the bolt as shown.